

STOPRATTLE INSTRUCTIONS

StopRattle works by either putting pressure on parts of the interior that are rattling or by spreading apart two interior joints that are rubbing together and squeaking.

1. While vehicle is moving, identify the area that is causing noise by pressing firmly along interior joints where rattle or squeak appears to be coming from, until it stops or reduces.*

Alternatively, rattle may be located by gently banging with the palm or bottom of the hand on different areas of the interior or dash.

2. Select the appropriate size of StopRattle according to the gap between the two joints of interior. Note - the wide end of the StopRattle should be slightly wider than the gap between the two interior pieces.

3. Carefully and slowly press the StopRattle into the gap until it is nearly flush with the interior joint. Note - be careful not to push it in too far so that it falls inside gap.

4. Repeat steps 1 through 3 with additional StopRattle until all further rattles or squeaks have been eliminated.

**Ensure passenger is looking for noise and driver is not distracted. While StopRattle may eliminate most interior rattles and squeaks, it cannot guarantee total effectiveness if noise is coming from behind interior paneling. Installer uses StopRattle at own risk; and does not hold manufacturer, distributor or reseller liable for any damage caused by the use or misuse of this product.*



Installation video use QR code or go to:

www.thebracketeer.com/stoprattle

SKU: STRTL152540

www.thebracketeer.com

Engineered in the U.S.A.

Made in China.

U.S. and Global Patents Pending.

Rattlestop is a registered trademark of

The Bracketeer LLC.

©2022 The Bracketeer. All rights reserved.

